

100

Print

108

102

Printer

Minolta #2

Properties

Idle

Minolta PageWorks/Pro 25

Where: min1

☐ Print to file

Comment:

104

Page range

☒ All

☐ Current page

☐ Pages: 106

Selection

Enter page numbers and/or page ranges separated by commas. For example, 1,3,5-12

Copies

Number of copies: 1

☒ Collate

1

2

3

1

2

3

Zoom

Pages per sheet: 1 Page

Scale to paper size: No Scaling

Print what: Document

Print: All pages in range

Options...

OK

Cancel

FIG. 1A

100020-20000000

150

Minolta #2 Properties

☐ Output Paper Size: Letter 8 1/2 x 11 in

☐ Portrait
 ☐ Landscape

☐ Collate Off
 ☒ Collate On

☒ Different Paper for 1st Page

Setup Summary
 Output Paper: Letter 8 1/2 x 11 in
 Paper Source: Tray2
 1st Page: Tray1
 Destination: Top Output Bin

FIG. 1B

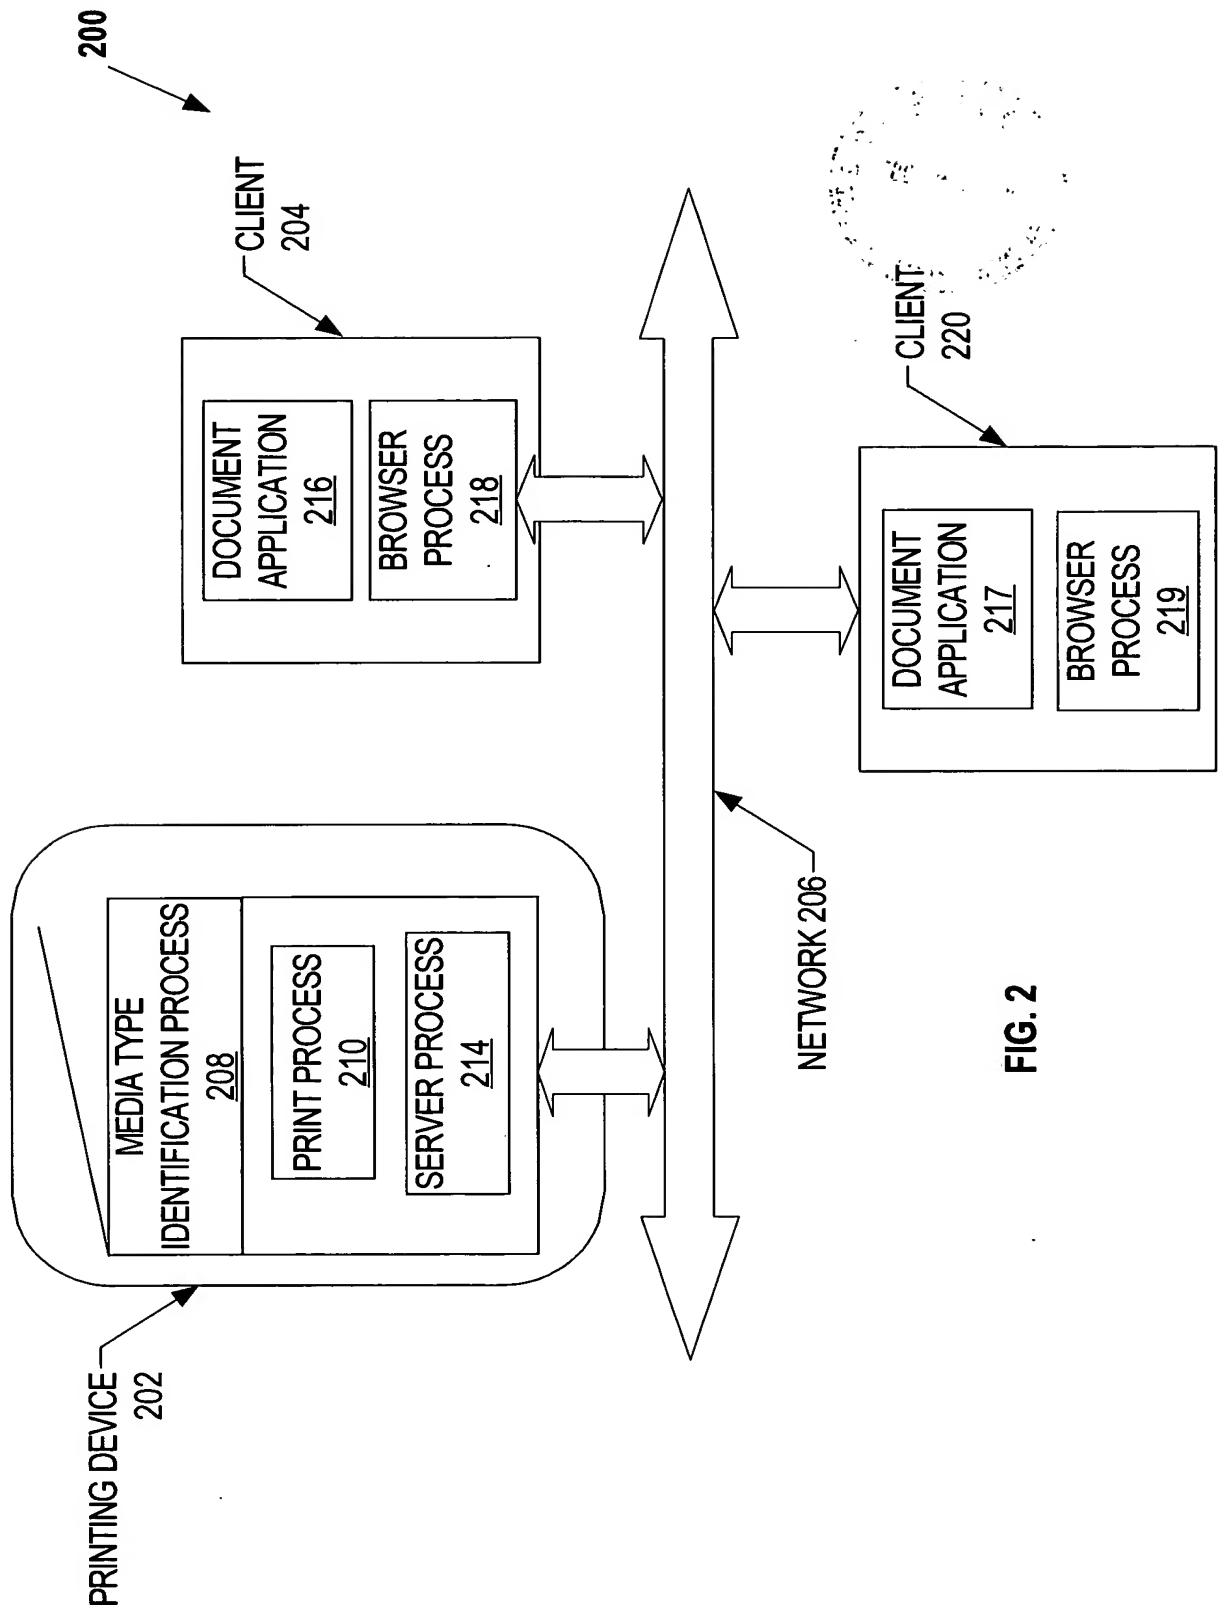


FIG. 2

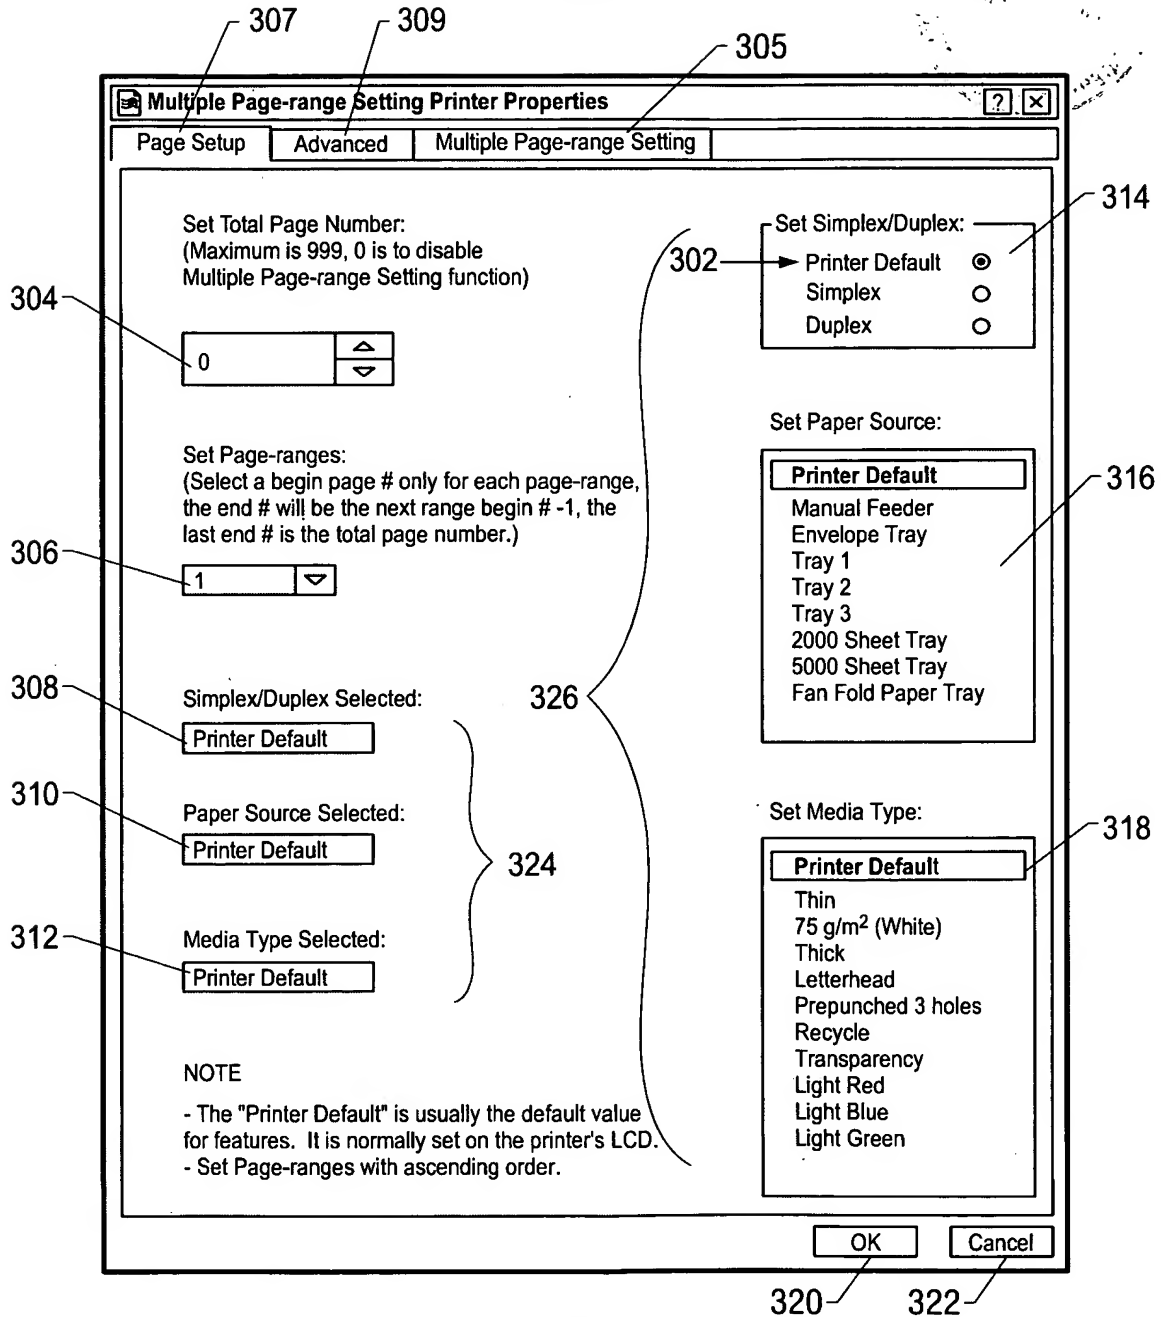
300

FIG. 3

Multiple Page-range Setting Printer Properties

Page Setup Advanced Multiple Page-range Setting

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

304 8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306 1

308 Simplex/Duplex Selected:
Simplex

310 Paper Source Selected:
Tray 2

312 Media Type Selected:
75 g/m² (White)

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

402

Printer Default ☐

Simplex ☒

Duplex ☐

Set Paper Source:

316

Printer Default

Manual Feeder

Envelope Tray

Tray 1

404 Tray 2

Tray 3

2000 Sheet Tray

5000 Sheet Tray

Fan Fold Paper Tray

Set Media Type:

318

Printer Default

Thin

406 75 g/m² (White)

Thick

Letterhead

Prepunched 3 holes

Recycle

Transparency

Light Red

Light Blue

Light Green 410


Next range 408 OK 320 Cancel 322

FIG. 4


Multiple Page-range Setting Printer Properties

Page Setup Advanced **Multiple Page-range Setting**

Set Total Page Number:
(Maximum is 999, 0 is to disable Multiple Page-range Setting function)

304 8 

Set Page-ranges:
(Select a begin page # only for each page-range, the end # will be the next range begin # -1, the last end # is the total page number.)

306 2 

308 Simplex/Duplex Selected:
Duplex

310 Paper Source Selected:
Manual Feeder

312 Media Type Selected:
Recycle

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

502 ☐ Printer Default
☐ Simplex
☒ Duplex

Set Paper Source:

504 ☒ Printer Default
☒ Manual Feeder
☐ Envelope Tray
☐ Tray 1
☐ Tray 2
☐ Tray 3
☐ 2000 Sheet Tray
☐ 5000 Sheet Tray
☐ Fan Fold Paper Tray

Set Media Type:

506 ☒ Printer Default
☐ Thin
☐ 75 g/m² (White)
☐ Thick
☐ Letterhead
☐ Prepunched 3 holes
☒ Recycle
☐ Transparency
☐ Light Red
☐ Light Blue
☐ Light Green

314 316 318

408 Next range 320 OK 322 Cancel

FIG. 5

7/12

600

Multiple Page-range Setting Printer Properties

Page Setup Advanced **Multiple Page-range Setting**

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

304 8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306 5

308 Simplex/Duplex Selected:
Simplex

310 Paper Source Selected:
Tray 3

312 Media Type Selected:
Light Green

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

314

602 Printer Default ☐
Simplex ☒
Duplex ☐

Set Paper Source:

316

604 Printer Default
Manual Feeder
Envelope Tray
Tray 1
Tray 2
Tray 3
2000 Sheet Tray
5000 Sheet Tray
Fan Fold Paper Tray

Set Media Type:

318

606 Printer Default
Thin
75 g/m² (White)
Thick
Letterhead
Prepunched 3 holes
Recycle
Transparency
Light Red
Light Blue
Light Green

408 Next range 320 OK 322 Cancel

FIG. 6

Multiple Page-range Setting Printer Properties

Page Setup Advanced Multiple Page-range Setting

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

304 8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306 8 708

308 Simplex/Duplex Selected:
Simplex

310 Paper Source Selected:
Tray 2

312 Media Type Selected:
75 g/m² (White)

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

702

- Printer Default ☐
- Simplex ☒
- Duplex ☐

314

Set Paper Source:

704

- Printer Default
- Manual Feeder
- Envelope Tray
- Tray 1
- Tray 2
- Tray 3
- 2000 Sheet Tray
- 5000 Sheet Tray
- Fan Fold Paper Tray

316

Set Media Type:

706

- Printer Default
- Thin
- 75 g/m² (White)
- Thick
- Letterhead
- Prepunched 3 holes
- Recycle
- Transparency
- Light Red
- Light Blue
- Light Green

318

Next range OK Cancel

408 320 322

FIG. 7

9/12

800

Multiple Page-range Setting Printer Properties

Page Setup Advanced **Multiple Page-range Setting**

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306

802

806

708

1 (1-1)
2 (2-4)
5 (5-7)
8 (8-8)

x Selected:

Simplex

Paper Source Selected:
Tray 2

Media Type Selected:
75 g/m² (White)

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

Printer Default ☐
Simplex ☒
Duplex ☐

Set Paper Source:

Printer Default
Manual Feeder
Envelope Tray
Tray 1
Tray 2
Tray 3
2000 Sheet Tray
5000 Sheet Tray
Fan Fold Paper Tray

Set Media Type:

Printer Default
Thin
75 g/m² (White)
Thick
Letterhead
Prepunched 3 holes
Recycle
Transparency
Light Red
Light Blue
Light Green

Next range OK Cancel

FIG. 8

FIG. 8

TABLE 900

#	PAGE-RANGE	SINGLE/ DUPLEX	PAPER SOURCE	MEDIA TYPE	ETC.
1	1-1	S	TRAY 2	75 g/m ² (WHITE)	
2	2-4	D	MANUAL FEEDER	RECYCLE (GRAY)	
3	5-7	S	TRAY 3	GREEN	
4	8-8	S	TRAY 2	75 g/m ² (WHITE)	

FIG. 9A**TABLE 950**

902 →

#	PAGE-RANGE	SINGLE/ DUPLEX	PAPER SOURCE	MEDIA TYPE	ETC.
1	1-2	D	MANUAL FEEDER	GREEN COLORED	
2	3-6	S	TRAY 1	THIN	
3	7-20	S	TRAY 3	RECYCLE	
4	21-22	D	TRAY 2	LETTERHEAD	
5	23-200	S	LCT	THICK	

FIG. 9B

10040-303260

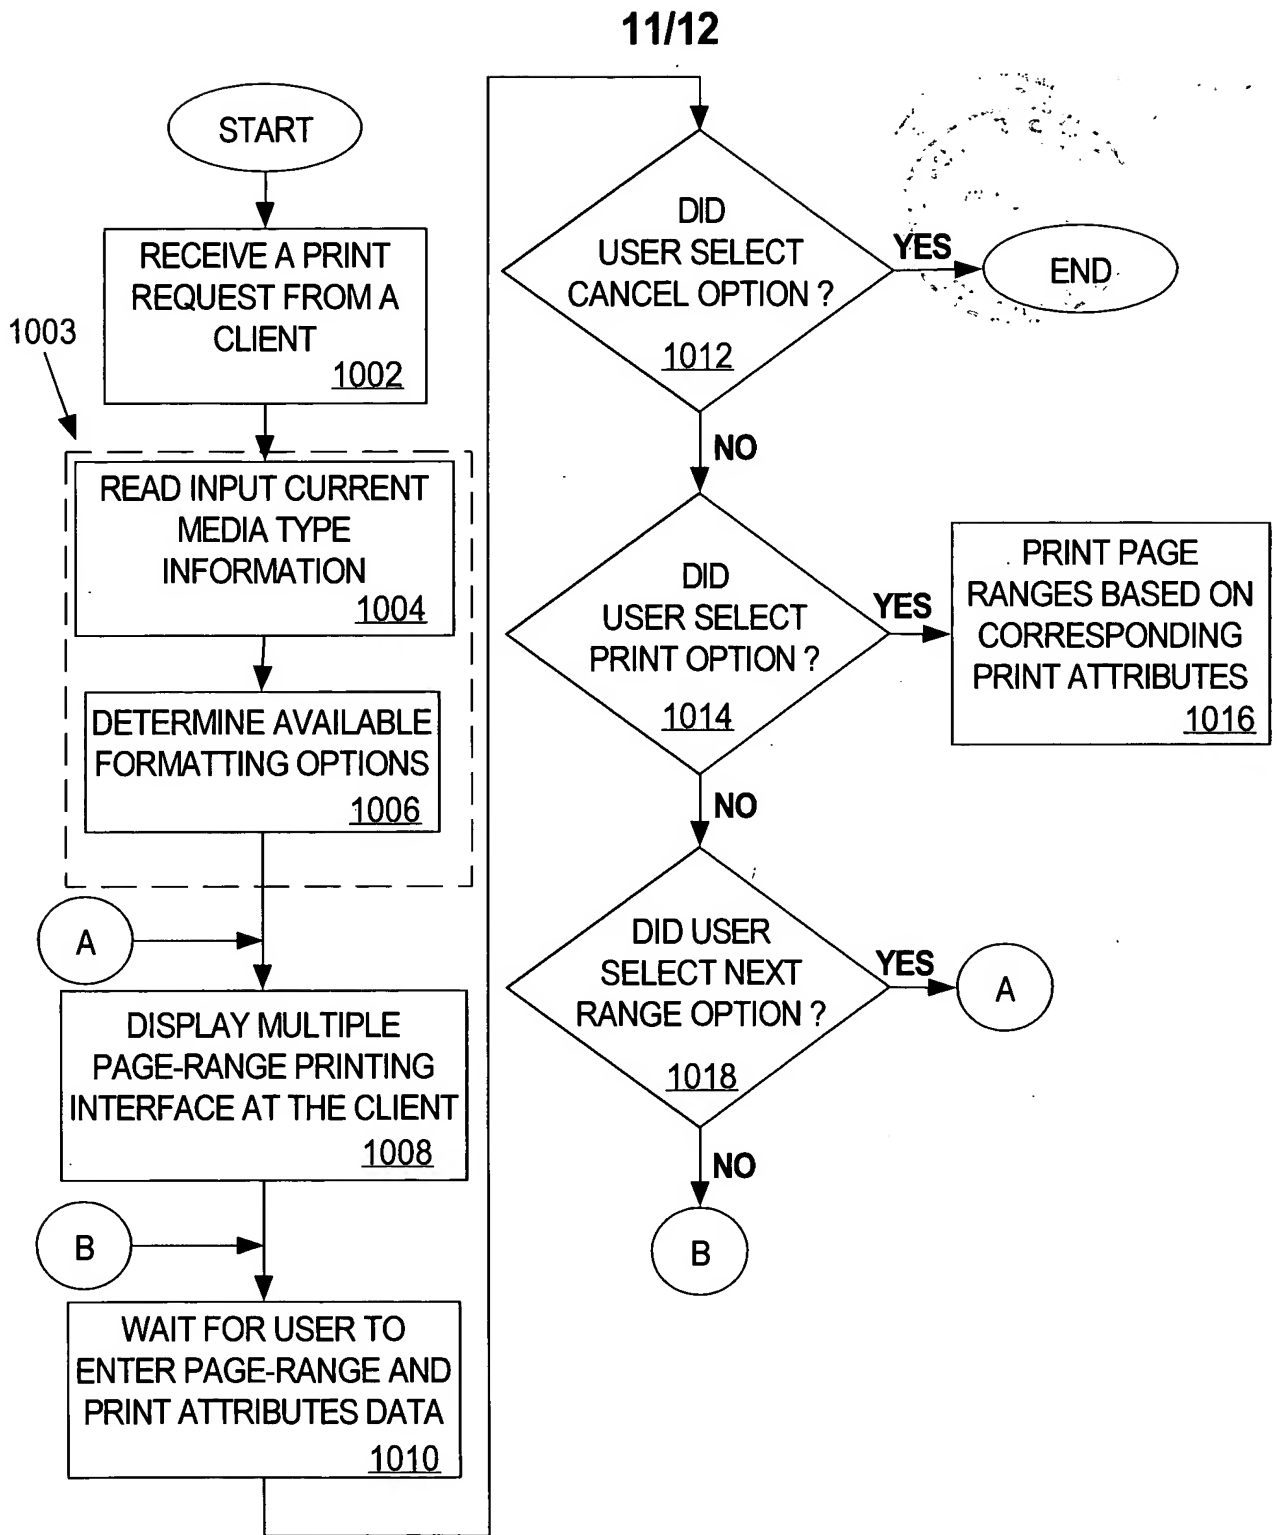


FIG. 10

12/12

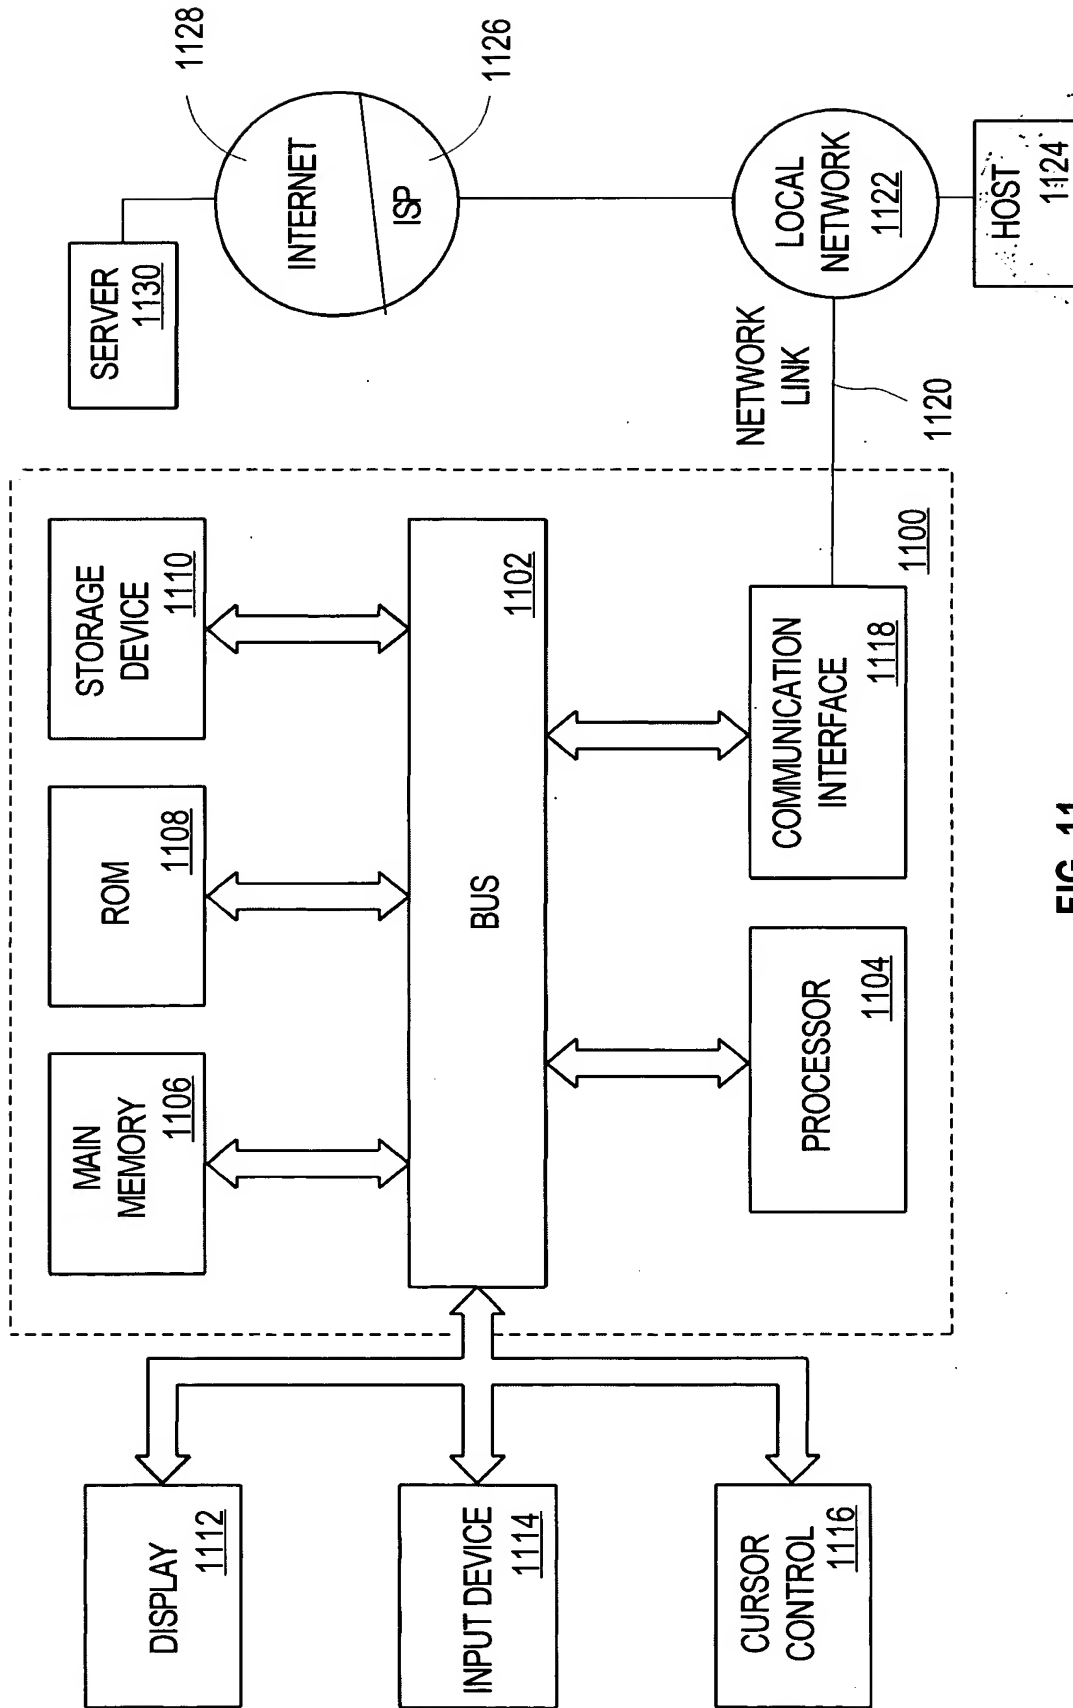


FIG. 11